Hammer-Set Installation

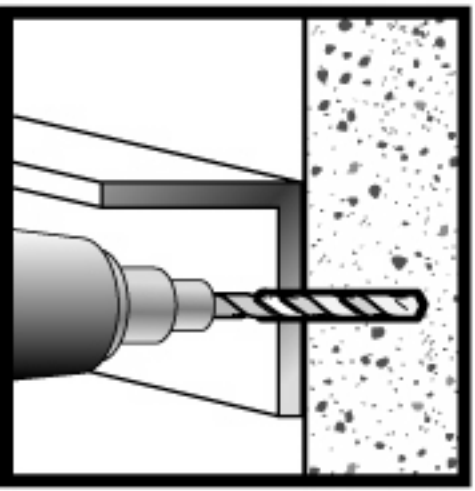

Drill...

Drill hole. In solid concrete, Drill hole through metal to be fastened into material.

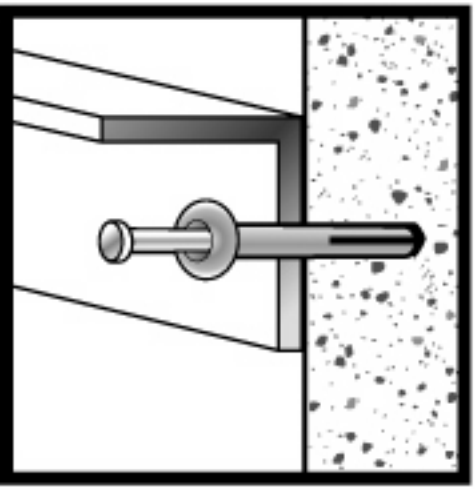

Fasten...

Insert Hammer-Set in hole until head of anchor body is flush with material to be fastened.

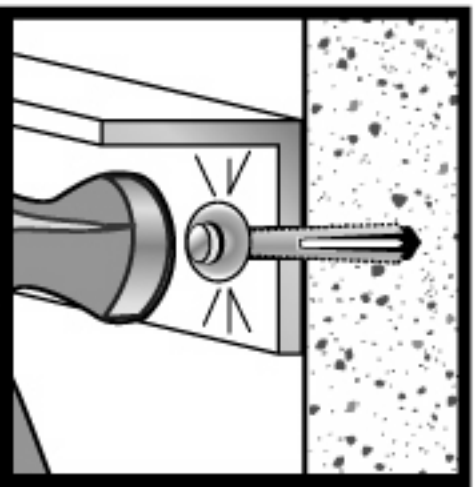

Tighten...

Tap the nail until flush with the head of the anchor.